



Main Burner Ignition Chart

Disconnect or shut-off gas supply



Remove grates and flame tamer to expose burner. Remove burner and check ports for clogs, obstruction or debris. Ensure that each port is clean.

Remove screws from sides of control panel and drop the panel to expose the valves and electrode

Clean around the electrodes contact point with a scouring pad or small wire brush

Inspect the valve orifice, clean orifice stem with a pipe cleaner to remove any spider webs, grease or sauce

Check for a spark by clicking the valve

Put the control panel back in place, turn on gas supply and try to ignite burners

If problem persists, contact a Bull Authorized Service Center or qualified technician

